

How to assemble the Custom Gauge Faces!

Needed Time: about 30 Minutes


Needed Tools:

- Screwdriver
- Fork
- Tissue
- Glue (Optional)
- Nipper
- Cutter
- Tinge foil (Optional)

It's easier to assemble the Gauge Face if your Tank is Full and the Engine is cold.

Ok... lets begin:


1. Pull down your Steering Wheel (The height adjustment is on the left side at your steering column)
2. Now you can pull off the Gauge Cover
3. Remove the 3 screws (one at the middle/top, and one down at the left and right side)

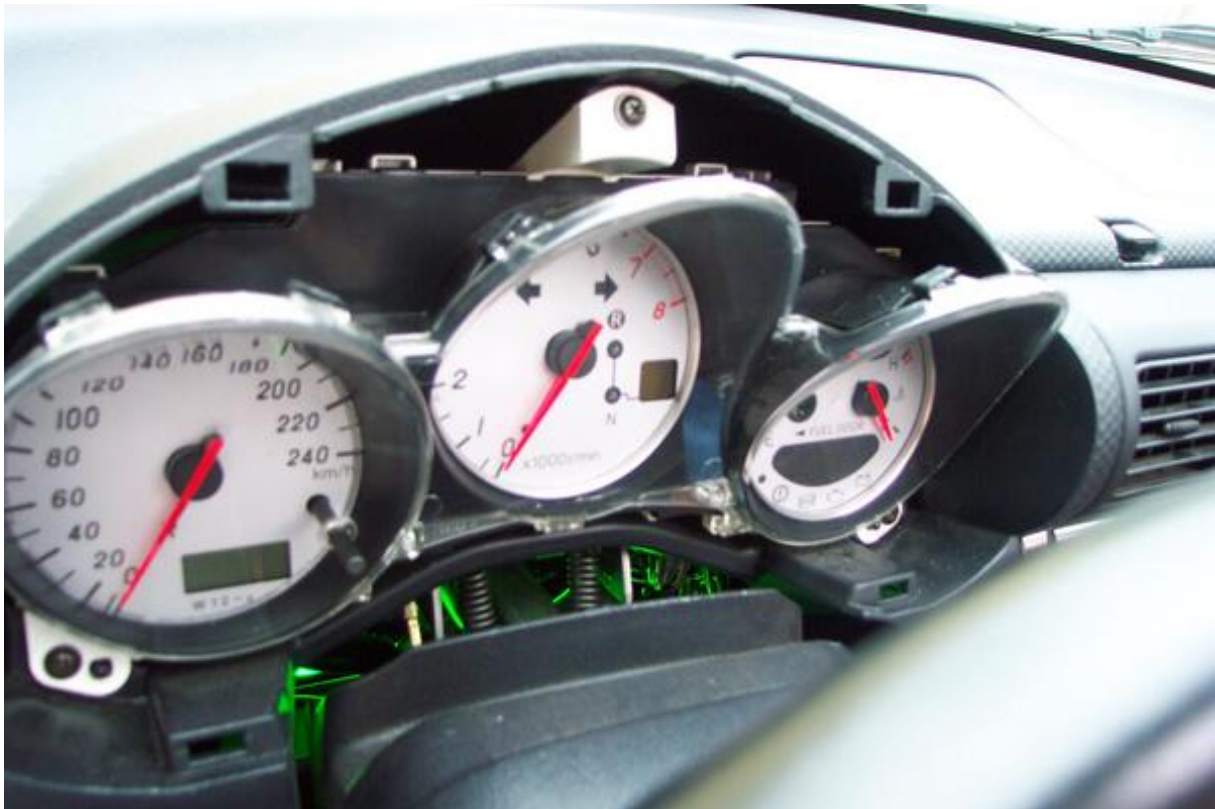


4. Now you can pull out the Gauge a little.



- 5. Remove the Clear Gauge Cover
- 6. Remove the Black Gauge Cover

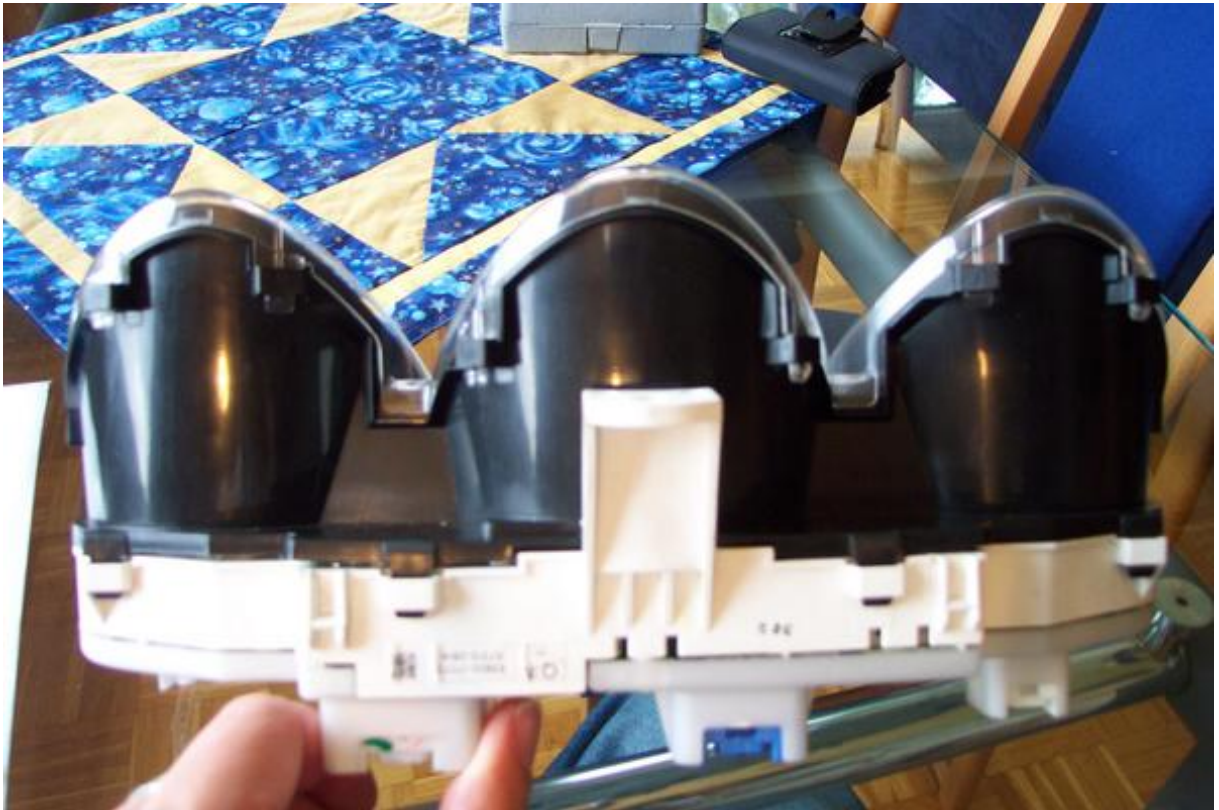


7. Now you have to remove the delimiter at the Speedo and Rev... There are 2 ways to do so. First, you can just cut your old Face (in case you don't need it anymore). Second, you can use a Nipper to press the delimiters together at the downside and pull them out.

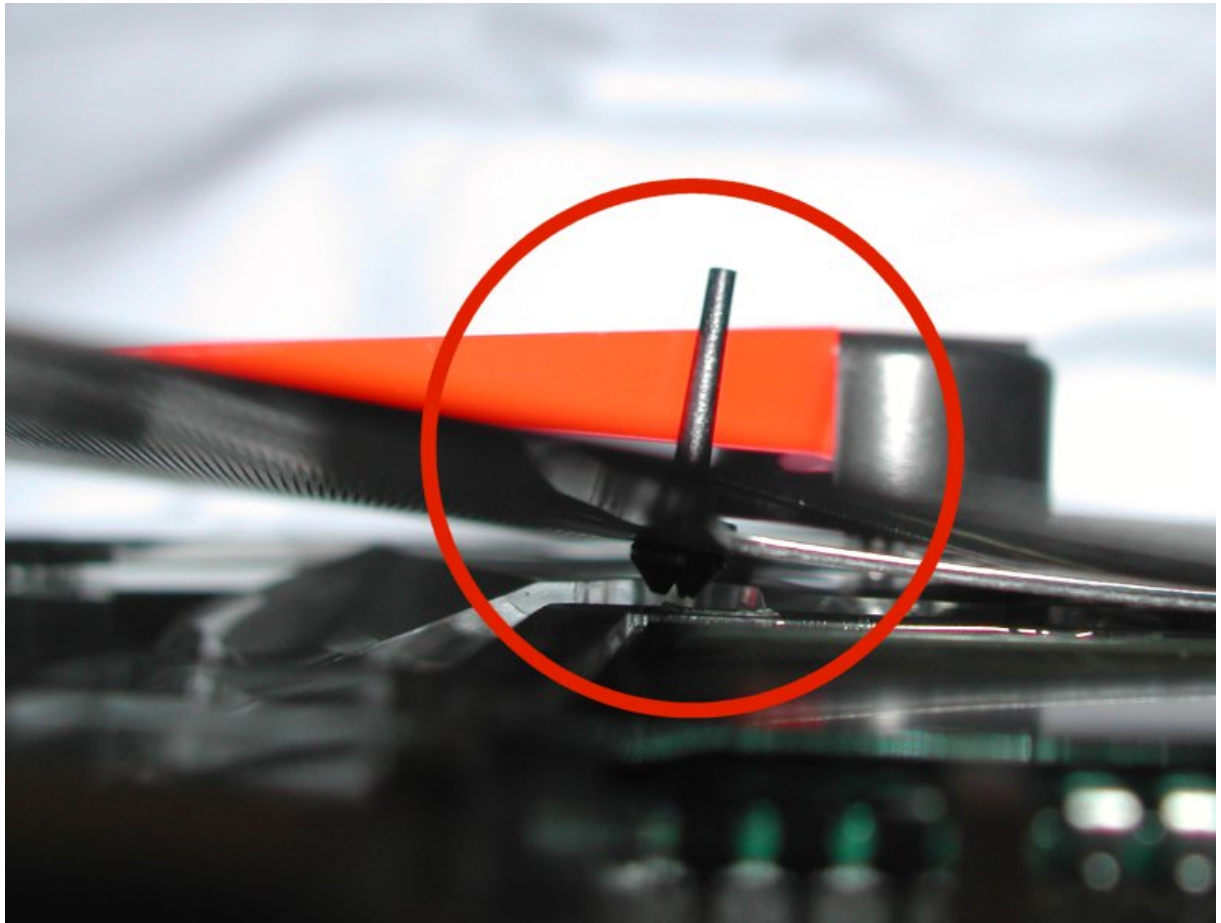

8. Turn on the ignition and remember the Position of your four Needles (best way is to make a Photo). In most ways the Needles will come to a stop short after the delimiters.



9. Turn off the ignition, close all doors, remove your Car key and remove the 3 Cables from the Gauge (by pushing those little Nipples at the connectors)

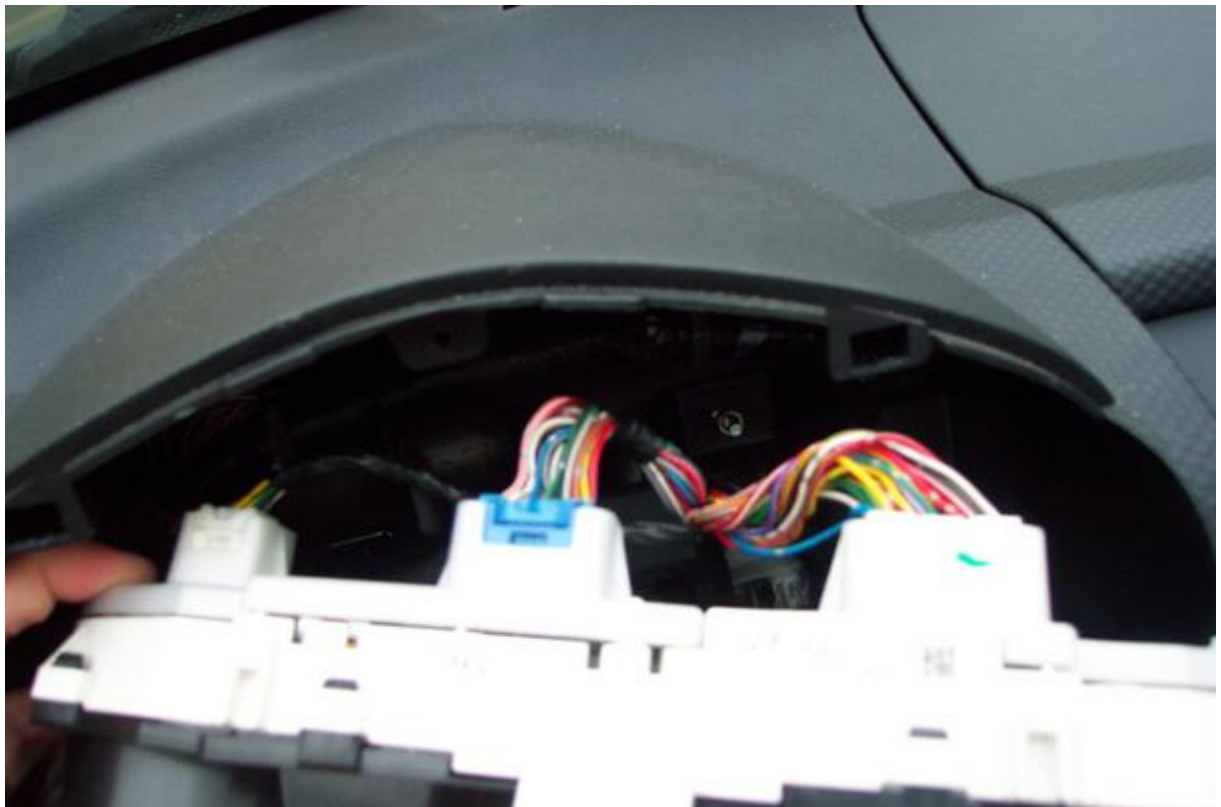




10. Put the Tissue under one Needle then use the Fork to remove the Needle carefully




11. Do this for every Needle

12. Now remove the old Gauge Face (The face is stuck at the four places where you can see those squares). Attention!!! Don't break off those four little steel axles!!

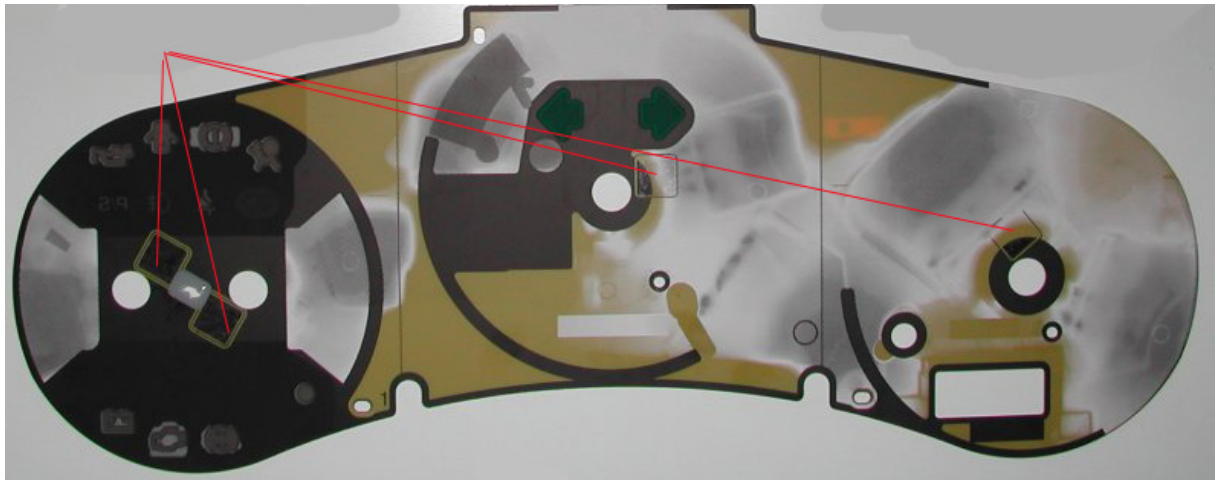

13. (Optional) If your Gauge later will have some areas lighter than others now you can use some Tinge foil to darken those areas

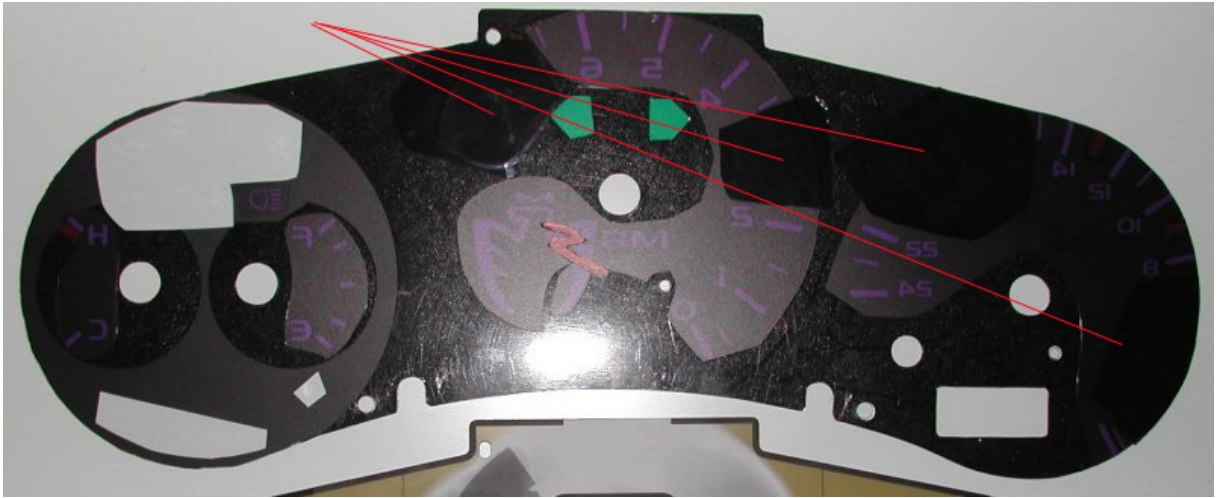

14. Lay on your new Gauge face... if you like you can glue it at the same points as your stock Face (but you don't need to).
15. Reinstall the Gauge (without Needles)
16. Make the ignition on and install the Needles at the same Positions as you remembered.
17. Install the delimiters (if they don't fit 100% you can glue them too)
18. Install the everything what is left and you are finished!